




Installation Instructions

Bluff Wheel Risers



STEEL WHEEL RISERS (SWR)

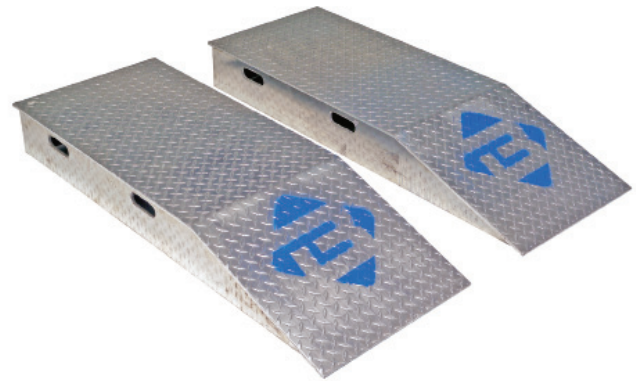

ALUMINUM WHEEL RISERS (AWR)

1. Back the truck to the dock in the location used for loading or unloading.
2. Mark the area on the concrete where the rear wheels of the truck come to rest.
2. Pull the truck forward enough to clear the area.
3. Place the wheel risers so the tops are directly over the marked spot where the truck wheels came to rest.
4. Steel wheel risers are designed to be permanently mounted to the concrete, so drill through the holes in the anchor tabs, into the concrete and install 1/2" anchor bolts. Firmly tighten the nuts.
5. Aluminum wheel risers normally do not have anchors, and are not meant to be permanently anchored to the concrete.